


## FIREFIGHTING HELMET PAB FIRE 04 HT

The firefighting helmet **PAB FIRE 04 HT**, with visor and central support, protects head, face and neck in fire-extinguishing and extraordinary situations. It corresponds with the Euronorm **EN 443-2008**.

A specially constructed outer shell improves complete protection of head, ears and neck.

According to the **EN 166** norm, the inner part of the helmet incorporates a movable visor which enables a whole face covering even if a gas mask is worn.

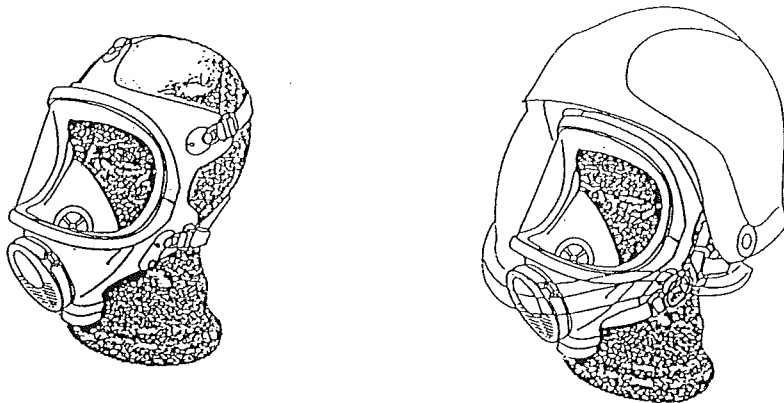

As well as at its upper side the visor has a snap-holder at the lower side.

Between the visor and the outer shell there are the connectors and the supports of the special elastic basket.

The TPU interior basket is fixed in 6 spots. Thanks to the ratchet regulator it is adaptable to the head size from 52 to 64 cm. Over the whole interior basket there is a soft antiallergic coating.

The chin-strap setting is obtained through the lower and the two side straps. Both the side-straps are provided by a movable, longitudinally adjustable tri-angle which enables the length and hanging regulation.

On the interior support there are seven rivets for the neck - protecting-leather fixation.

To assure a safe and normal wearing should the wearer carefully fix the helmet by height and volume of his head so that, even in case of bowing or abrupt moves, it remains steadily fixed to the head. That can be realised through the interior basket-regulation.

Successively the adjustment through the chin strap should follow. The position of the chinstrap on the longitudinal strap is adjustable through the movable triangle. It should be adjusted in a way to assure simultaneously a soft embracement of chin and safe wearing of the helmet.

In case that, according to the **EN 166**, a gas mask should be worn; we first put on the mask, and only after that we put the helmet over the mask. The frontal part of the helmet lays over the frontal part of the mask, up to the mask's visor. Finally we pull the helmet back. We adapt it to the head-volume and fix it with the ratchet.

The chinstrap has to be pulled between the lower part of the mask and neck, up to its opposite part and clipped with the clipper.

The visor is pulled out - only when an eye or face protection against direct flame, water-spurt or flying particles is needed.

The helmet is to be cleaned with a mild solution of detergents and, because of its sensitivity to the scratches, a special attention has to be paid to the visor.

Therefore, after washing it, we always wipe it with a soft cloth.

If there are no mechanical damages the duration of the the shell, of the interi-  
or basket and of the visor is 4 years.

For any further information, please contact the producer:

***P A B - Plastika AKRAPOVIĆ BUZET, 52420 Buzet, Most 26***

***C R O A T I A***

***Tel. : ++ 385 52 66 26 62, 66 23 00***

***Fax : ++ 385 52 66 22 54***

***www. pab-buzet.com***

***E-mail : info@pab-buzet.com***



Accreditation No. 017

